

User's Manual

Dual-Laser Omnidirectional Vertical Scanner



Important Notice

No warranty of any kind is made in regard to this material, including, but not limited to, implied warranties of merchantability or fitness for a particular purpose. We are not liable for any errors contained herein or incidental or consequential damages in connection with furnishing, performance or use of this material.

No part of this document may be reproduced, transmitted, stored in a retrieval system, transcribed, or translated into any language or computer language in any form or by any means electronic, mechanical, magnetic, optical, chemical, manual or otherwise, without express written consent and authorization.

We reserve the right to make changes in product design without reservation and without notification. The material in this guide is for information only and is subject to change without notice. For the latest revision please contact your distributor.

All trademarks mentioned herein, registered or otherwise, are the properties of their various respective owners.

Copyright © 2012. All rights reserved.

Printing Guidance

This manual is in A5 size. Please double check your printer setting before printing it out.

Revision History

Changes to the original manual are listed below:

| Version | Date | Description of Version |
|---------|-----------|------------------------|
| 1.0 | Oct. 2012 | Initial release |

Laser Safety

The Miniature Dual-Laser Omnidirectional Hands-free Scanner complies with safety standard IEC 60825 for a Class I laser product. It also complies with CDRH as applicable to a Class IIa laser product. Avoid long term staring into direct laser light.

Radiant Energy: The Miniature Dual-Laser Omnidirectional Hands-free Scanner uses two low-power visible laser diodes operating at 650nm in an opto-mechanical scanner resulting in less than 3.9 μ W radiated power as observed through a 7mm aperture and averaged over 10 seconds.

Do not attempt to remove the protective housing of the scanner, as unscanned laser light with a peak output up to 0.8mW would be accessible inside.

Laser Light Viewing: The scan window is the only aperture through which laser light may be observed from this product. A failure of the scanner motor, while the laser diode continues to emit a laser beam, may cause emission levels to exceed those for safe operation. The scanner has safeguards to prevent this occurrence. If, however, a stationary laser beam is emitted, the failing scanner should be disconnected from its power source immediately.

Adjustments: Do not attempt any adjustments or alteration of this product. Do not remove the protective housing of the scanner. There are no user-serviceable parts inside.

Caution: Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous laser light exposure.

Optical: The use of optical instruments with this product will increase the eye hazard. Optical instruments include binoculars, magnifying glasses, and microscopes but do not include normal eye glasses worn by the user.

For CE-Countries

This scanner is in conformity with CE standards. Please note that an approved, CE-marked power supply unit should be used in order to maintain CE conformance.

Table of Contents

| | |
|--------------------------------------------------------|----|
| Important Notice | i |
| Introduction | 1 |
| Unpacking | 1 |
| Finding Your Way Around..... | 2 |
| Connecting and Mounting | 2 |
| Power | 2 |
| Verifying Scanner Operation | 3 |
| Mounting..... | 4 |
| Mounting Plate Installation | 5 |
| Auxiliary Handheld Scanner Connection (optional) | 6 |
| Back Mounting | 7 |
| Connecting to the Host | 7 |
| Setting Up the Scanner..... | 8 |
| Scan Test..... | 8 |
| Set Up..... | 8 |
| Operation..... | 9 |
| LED Indications..... | 9 |
| Beeps 10 | |
| Changing the Beep Volume | 10 |
| Sleep Mode | 11 |
| Controlling the Scanner from a POS System | 11 |
| Connecting to EAS System (Optional) | 12 |
| Maintaining the Scanner | 13 |
| Cleaning the Scan Window..... | 13 |
| Replacing the Interface Cable | 13 |
| Specifications | 14 |
| Dimension | 16 |
| Pin Assignments | 18 |
| Troubleshooting..... | 19 |

Introduction

This advanced scanner is a proud to be among the world's first dual-laser presentation scanners, and it incorporates numerous record-breaking features. Its pioneering application of dual laser diodes drastically enhances scanning power by doubling the scan lines, broadening scan angle and intensifying the scan pattern across the scan field. With this state-of-the-art technology, it is able to deliver a comprehensive 32-line scan pattern cycling at 2400 scans per second. The scanner is additionally equipped with Z-SCAN technology—an innovative ASIC hardware decode protocol that provides real-time decoding that effectively shortens customer transaction time.


The broad, omnidirectional scan field effectively facilitates hands-free scanning of barcodes on products of many different shapes. Also, the scanner is programmed with multiple beeper tones and barcode data edition functions to accommodate a variety of applications.

Unpacking

Dual-Laser Omnidirectional Vertical Scanner,
with attached mounting plate



5V power adapter (model depends on
electrical requirements of your geographic
location)

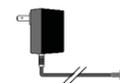

User's Manual/Programming Guide CD



Connection cable (This cable is usually, but
not always, supplied. Model depends on
customer needs.)




Screws



Please check for any damaged or missing items; contact your dealer if there is a problem.

Finding Your Way Around

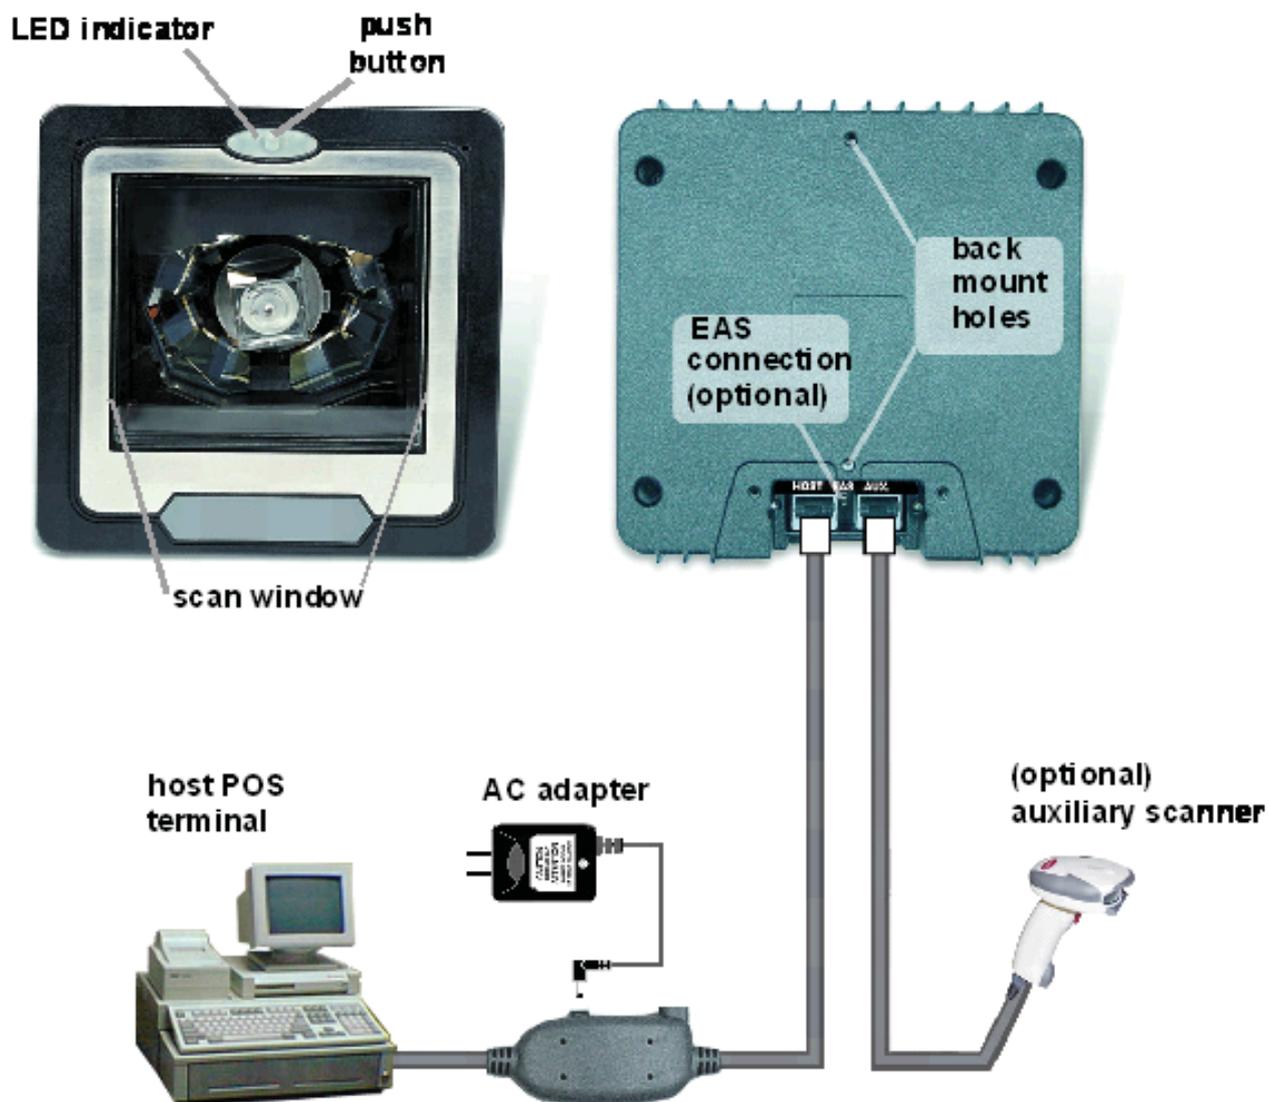

Connecting and Mounting

Power

The scanner requires a minimum of 300mA at 5 V DC power. The interface cable that comes with the scanner supports both direct power (where the scanner takes power from the host machine) and external power (that's what the supplied power adapter is for). A sufficiently robust POS system can support a scanner successfully without external power; a POS system with a barely adequate power supply may produce erratic performance (either of the POS system itself, or of the scanner, or both) when a scanner is attached.

Unless you are sure your POS system can handle the load, it is recommended that you use the supplied power adapter.

When an external adapter is connected, the scanner does not take power from the host.


The scanner turns on when power is supplied, and turns off when power is removed. There is no on/off switch on the scanner itself.

Use only an AC/DC power adapter approved for the scanner. Use of other power supplies may cause damage to the product, and void the factory warranty.

Verifying Scanner Operation


Before mounting your scanner, please follow the procedure below to verify scanning operation.

1. Take out the screws and remove the mounting plate.

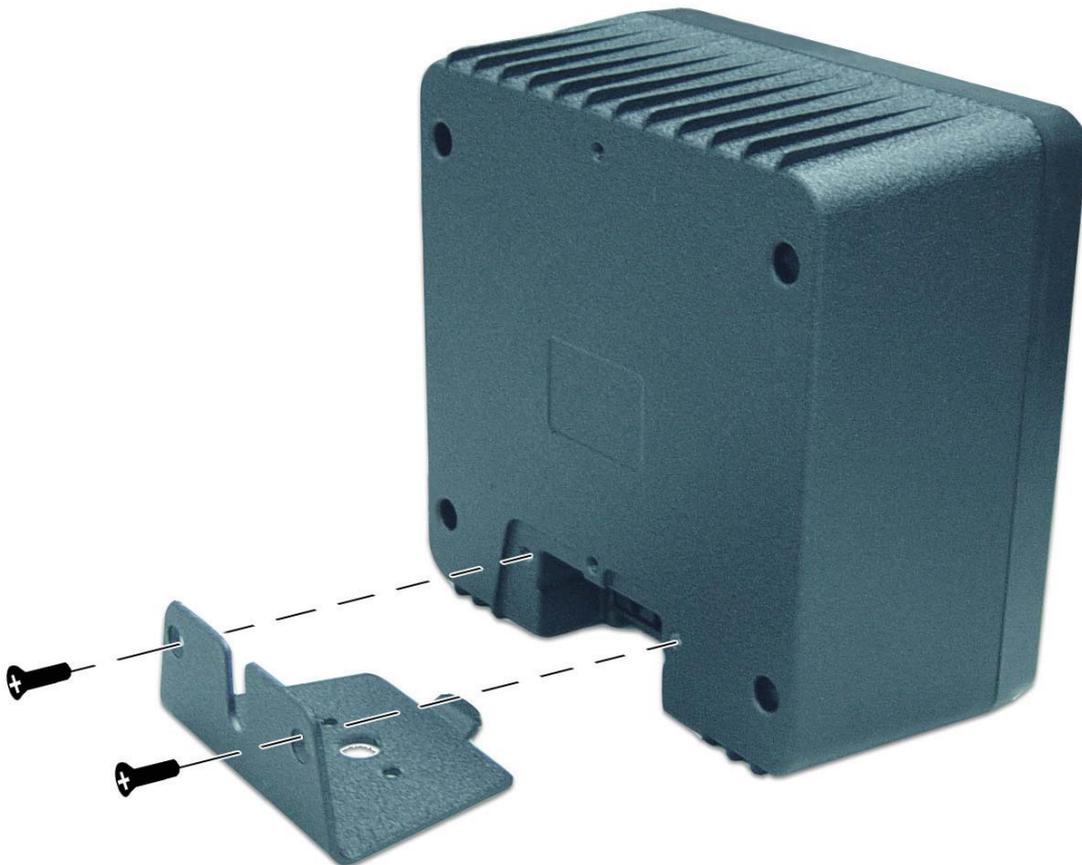

Remove Mounting Plate

2. Insert the 8-pin modular plug of the power link cable into the “host” connector in the back of the scanner until a firm click is heard.

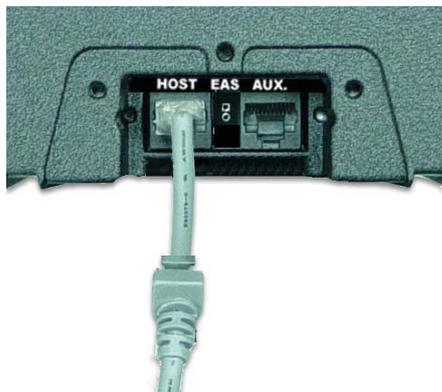

3. Plug the power adapter into the jack on the power link cable. (See page 2 Figure)
4. Plug the AC end of the power adapter into an AC outlet. The scanner powers up, the buzzer sounds four beeps and the LED indicator glows blue.
5. Present a known-good test barcode to the scanner. The scanner should issue a short beep and the LED should flash red momentarily. [If the scanner is connected to a keyboard wedge for this test, it should read one barcode, beep, then remain with a red LED indicating light. This is normal when the keyboard wedge is not connected to a live host terminal.]

Note: If the scanner does not produce any beeps, or produces the wrong beeps, or the LED does not light, remove the power connection and refer to the section on Troubleshooting.

Mounting


After the scanner passes its verification test (section above), proceed with mounting.

The scanner should be installed in a location away from direct sunlight; high levels of ambient light reduce scanner effectiveness.

The two basic styles of mounting are a) with the included mounting plate, and b) with a custom bracket (not included) for back mounting. If an auxiliary hand-held scanner is to be attached, it must be properly connected as part of the mounting process.

Mounting Plate Installation

1. Position the mounting plate in the desired location and secure it in place. If desired, use the full-size boring template in [page 21 Figure](#).

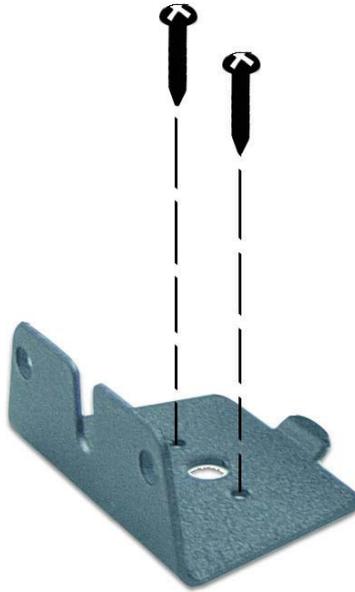

2. Insert the connecting cable in the slot in the mounting plate.



3. Insert the 8-pin modular plug of the power link cable into the “host” connector in the back of the scanner until a firm click is heard.

4. Move the scanner into position on the mounting plate, engaging the tab on the underside. Be careful not to pinch the cable.



Install Scanner on Mounting Plate

5. Replace the mounting plate screws.

Auxiliary Handheld Scanner Connection (optional)

The scanner supports the operation of an auxiliary handheld scanner, which may be connected via a 10-pin RS-232 modular plug to the connector marked “aux” in the back of the scanner.

1. Insert the connecting cable in the slot in the mounting plate, but reverse the cable relief molding of the scanner interface cable in the mounting plate to allow space for the auxiliary handheld scanner cable.



2. Insert the 8-pin modular plug of the power link cable into the “host” connector in the back of the scanner until a firm click is heard.
3. Insert the auxiliary cable connector into the 10-pin “aux” jack until it clicks and route the cable through the space above the scanner interface cable.
4. Move the scanner into position on the mounting plate, engaging the tab on the underside. Be careful not to pinch any cables.
5. Replace the mounting plate screws.

Back Mounting

If desired the scanner may be mounted to your own custom bracket using the threaded mounting holes on the back. (See page 2 Figure) The mounting holes are threaded to accommodate M4 x 0.7 machine screws to a depth of 5.0 mm.

Make sure your bracket design allows for the exit of the interface cable. The supplied mounting plate protects the interface cable connection, but requires that the cable exits from the back of the unit.

Connecting to the Host

The power link interface cable comes with different host-end connectors, depending on the host. Follow the steps below to connect the interface cable to the host.

1. Make sure that the power of the host system is off.
2. Connect the host end of the interface cable to the appropriate connector on the host system.
3. For those cases where external power is used, plug the external AC power adapter into the jack on the interface cable. (See page 2 Figure)
4. Turn on the host system.

Setting Up the Scanner

In some cases no setup is required. The scanner is either pre programmed to suit the situation, or it auto detects and is ready to go. In other cases the scanner must be informed about what kind of system it is connected to. This can be done in a few moments using the included booklet titled Programming Guide.

The Programming Guide may be used to set a number of parameters on the scanner: communication interface type (RS-232, Keyboard, USB), beep tone, sleep mode timings, same-code delay time, enable/disable decoding of numerous code types, and more advanced things like set headers and trailers.

Individual parameters may be set at any time without affecting the other parameters.

Scan Test

1. With the scanner running (LED blue) and the host system on, try to scan several known-good barcodes.
2. Check the results on the POS screen. If the scanner is reading okay, no further setup may be necessary.
3. If the POS screen does not show the expected scans, go to Set Up, below.

Set Up

1. With the scanner running (LED blue) and the host system on, present the <Enter/Exit Programming Mode> barcode, found on the inside cover of the Programming Guide, to the scanner. The scanner gives two beeps: low and high, and the LED turns red. The scanner is in programming mode.
2. Decide which parameters are required and find their barcodes in the Programming Guide.
3. Cover unwanted codes with your hand and present the desired codes, one by one, to the scanner. The scanner beeps once as it accepts each code.
4. When done, again present the <Enter/Exit Programming Mode> barcode. The scanner beeps twice, once long and once short, and the LED returns to blue. The scanner has been programmed.
5. Test again with known-good barcodes. If results are good, you are done setting up. Otherwise, return to step 1 and try again.

Operation

The scanner can read barcodes in either sweep or presentation mode to accommodate different requirements. Sweep mode means moving items through the scan volume. Left to right, right to left, top to bottom, bottom to top, etc. are all okay. This scanner is truly omnidirectional. Sweep scanning is usually used for high throughput and reduced product handling. Presentation scanning is used where counter top space is at a premium. The product is moved toward the scan window (“presented”) until the barcode is read, then the product is removed.

LED Indications

A dual color red-blue LED indicates operating status as follows:

| LED status | Indication |
|---------------------------------------|----------------------------------------------------------------------------------------------|
| Off | No power supplied to the scanner. |
| Steady blue light | The scanner is on and ready to scan. |
| One red flash | A barcode has been successfully decoded. |
| Steady red light | A barcode has been successfully decoded, but the object is not removed from the scan window. |
| | The scanner is in programming mode. |
| Flashing blue light | The scanner is in sleep mode. |
| Steady red/blue light | This indicates the scanner has a motor or laser failure. |
| | For motor failure, a periodic beep is sounded. |
| | Return the unit for repair. |
| Alternate flashing red and blue light | The scanner detects failing power. Please check the power supply. |

Beeps

A beeper gives audible feedback on scanner operation.

| Beeps | Indication |
|----------------------|-------------------------------------------------------------------------------------|
| One beep | A barcode has been successfully decoded. |
| Four beeps in series | This indicates the scanner passed the power on self-test and is operating properly. |
| Two beeps: low-high | The scanner has entered programming mode. |
| Two beeps: same tone | Scanner has returned from programming to normal mode. |
| Continuous tone | This is a failure indication. Return the unit for repair. |

Changing the Beep Volume

The scanner can be programmed with the Programming Guide to change beeper tone, volume and duration; the beeper volume can also be changed by using the push button.

The default beep volume is loud. There are three sound levels: loud, medium, and low.

Press and hold the push button for about 5 seconds. The scanner will cycle to its next level. Repeat till the desired level is reached.

Note: The volume setting is saved in volatile memory. That means the change will be lost when the scanner powers down. On next power up the scanner resets to the configured setting. If you wish to keep the changed volume setting, use the Programming Guide to set the changes.

Sleep Mode

After the scanner has been inactive for a period of time, the laser automatically turns off; after some more time, the motor turns off and the scanner enters “sleep mode,” indicated by the blue status LED blinking once a second. To wake up the unit, simply present an object close to the scanner window, or press the push button.

Note: The scanner includes a motion sensor that detects activity in front of the scan window. The detecting distance is up to about 50mm (2 inches) from the scan window, depending on ambient light.

Controlling the Scanner from a POS System

The scanner can be controlled from the POS system via the RS-232C interface. Control can be accomplished by transmitting the following single-byte commands to the scanner. The default settings for the commands are as follows:

| ASCII Code | Function | Byte is Also Called: |
|------------|-------------------------------|-----------------------|
| 0E Hex | enable (resumes from disable) | Shift Out or <Ctrl-N> |
| 0F Hex | disable | Shift In or <Ctrl-O> |
| 05 Hex | power-up re-initialization | ENQ or <Ctrl-E> |
| 12 Hex | sleep | DC2 <Ctrl-R> |
| 14 Hex | wake up (resumes sleep) | DC4 <Ctrl-T> |


Note: When the scanner is disabled, the scanner motor will continue running until the scanner goes into sleep mode.

Connecting to EAS System (Optional)


To install an EAS, the deactivator must be equipped with EAS connector.

Make sure that the power of the EAS system is off.

1. Demagnetizing coil can be installed around the scan window. Please see your EAS User's Manual or contact the manufacturer for assistance.
2. Connect the deactivator using the EAS connector on the back of the scanner.

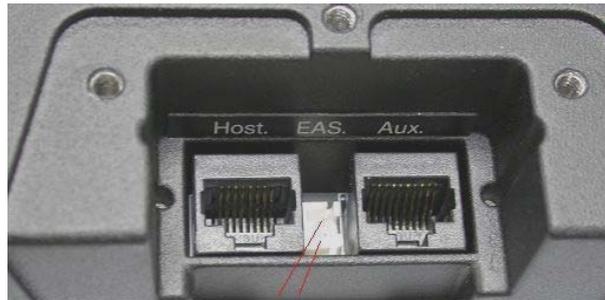

4. Turn on the EAS system.
5. LED signal and beep sound should be made when attempting to demagnetize.

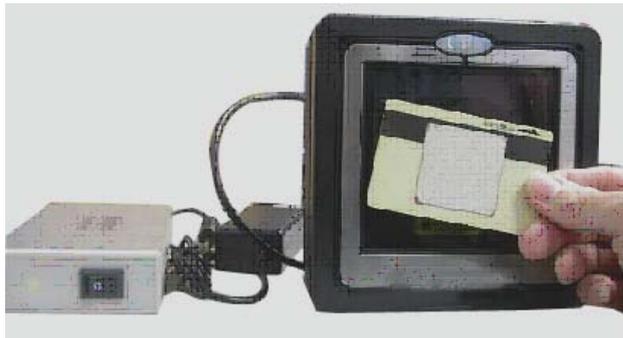

Maintaining the Scanner

The scanner is designed for long-term trouble-free operation and rarely needs any maintenance. Only an occasional cleaning of the scanner window is necessary in order to remove dirt and fingerprints.

Cleaning the Scan Window

Wipe the scan window with a soft lint-free cloth and a non-abrasive cleaner to avoid scratching. The scan window may be cleaned while the scanner is running.

Replacing the Interface Cable

The standard interface cable is attached to the scanner with an 8-pin modular connector. When properly seated, the connector is secured in the scanner handle by a flexible retention tab. The cable is designed to be field replaceable.

Replacement cables can be obtained from your authorized distributor. To replace the cable, follow these steps.

1. Make sure that the power of your computer system is switched off, and if a power adapter is used, disconnect it from the scanner cable.
2. Disconnect the old scanner cable from the computer system.
3. Remove the screws that hold the mounting plate on the scanner and disengage the mounting plate.
4. Press down the small tab on the connector where the old cable is attached to the scanner and pull. The connector should come out.
5. Insert the connecting cable in the slot in the mounting plate.
6. Insert the 8-pin modular plug of the power link cable into the "host" connector in the back of the scanner until it clicks.
7. Mate the scanner and the mounting plate, engaging the tab on the under- side. Be careful not to pinch the cable.
8. Replace the mounting plate screws.
9. Plug the new cable into the host.
10. If a power adapter is used, plug the power adapter into the jack on the interface cable.

Specifications

OPERATIONAL

| | |
|----------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Light Source | Dual 650nm visible laser diodes |
| Depth of Scan Field | 0-216mm |
| Width of Scan Field | 90mm @ contact, 218mm @ 216mm |
| Number of Scan Lines | 32 |
| Scan Pattern | 8-direction scan field |
| Scan Speed | 2400 scans per second |
| Minimum Bar Width | 5mil @ PCS 90% |
| Print Contrast | 30% @ UPC/EAN 100% |
| Indicators (LED) | Two-color LED (blue & red) |
| Decode Capability | UPC/EAN/JAN, UPC Versions A&E, EAN-8, EAN-13, JAN-8, JAN-13, ISBN/ISSN, Japanese Book-land, Code 39 (with full ASCII), Codabar (NW7), Code 128/EAN 128, Code 93, Interleaved 2 of 5, Addendum 2 or 5, MSI/Plessey, China Post Code, Code 32 (Italian Pharmacode) Optional: IATA Code, Industrial 2 of 5, Standard 2 of 5, Discrete 2 of 5, Matrix 2 of 5, Code 11, RSS-14, RSS Limited, RSS Expanded |
| Beeper Operation | Programmable tone and beep time |
| System Interfaces | Keyboard, RS-232C, USB1.1, Wand, Aux. RS-232 |

PHYSICAL

| | |
|--------|----------------------|
| Height | 152mm |
| Depth | 82mm |
| Width | 152mm |
| Weight | 1.2kg |
| Cable | Standard 2m straight |

POWER



| | | |
|-------------------|----------------------------------------|-----------|
| Input Voltage | 5VDC±10% Power | 1.5 watts |
| Operating Current | 300mA @ 5 V | |
| Laser Class | CDRH: Class II a; IEC 60825-1: Class I | |
| EMC | CE & FCC DOC compliance | |

ENVIRONMENT

| | | |
|-----------------------|--------------------------------|--|
| Operating Temperature | 0°C - 40°C | |
| Storage Temperature | -20°C - 60°C | |
| Humidity | 5% - 95% RH (non-condensing) | |
| Light Level | max. 4000 LUX (fluorescent) | |
| Shock | Designed to withstand 1m drops | |



Specifications subject to change without notice.

Dimension

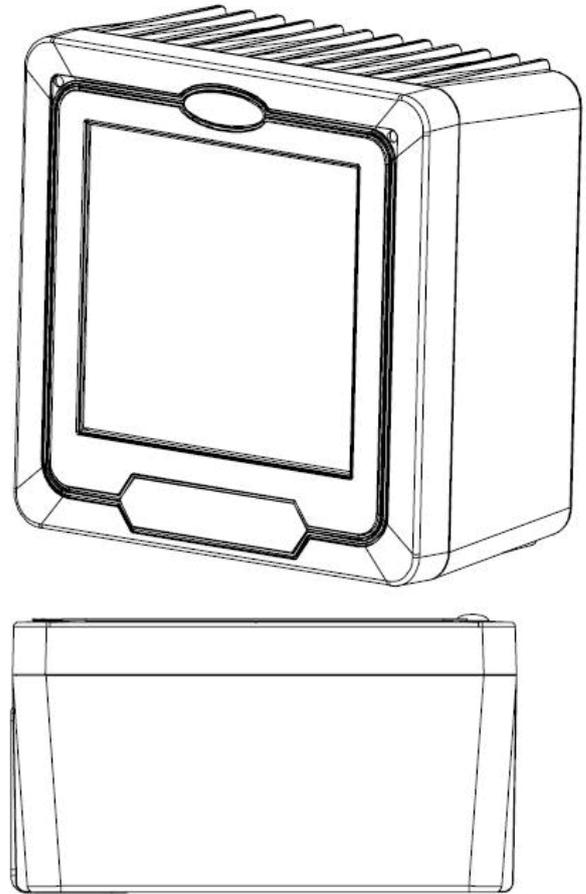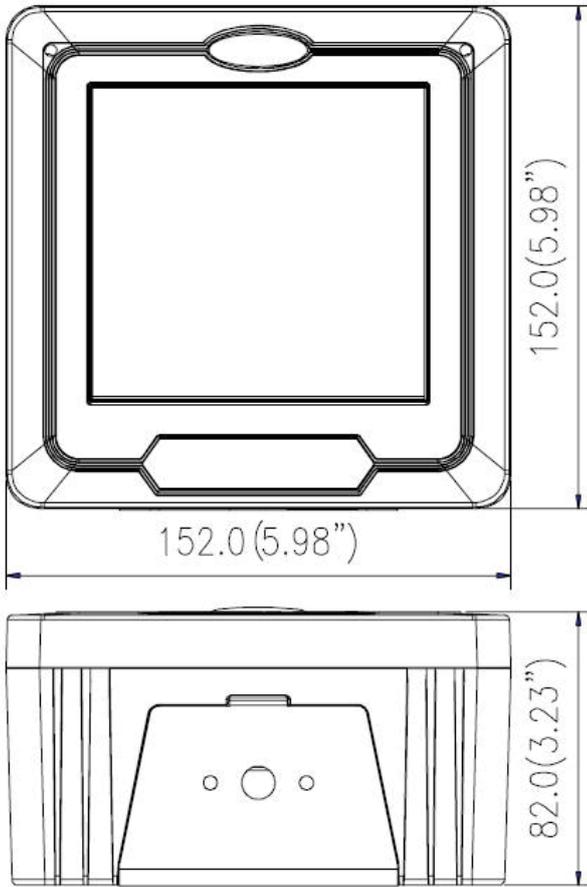

Units: mm (inches)


Dimension

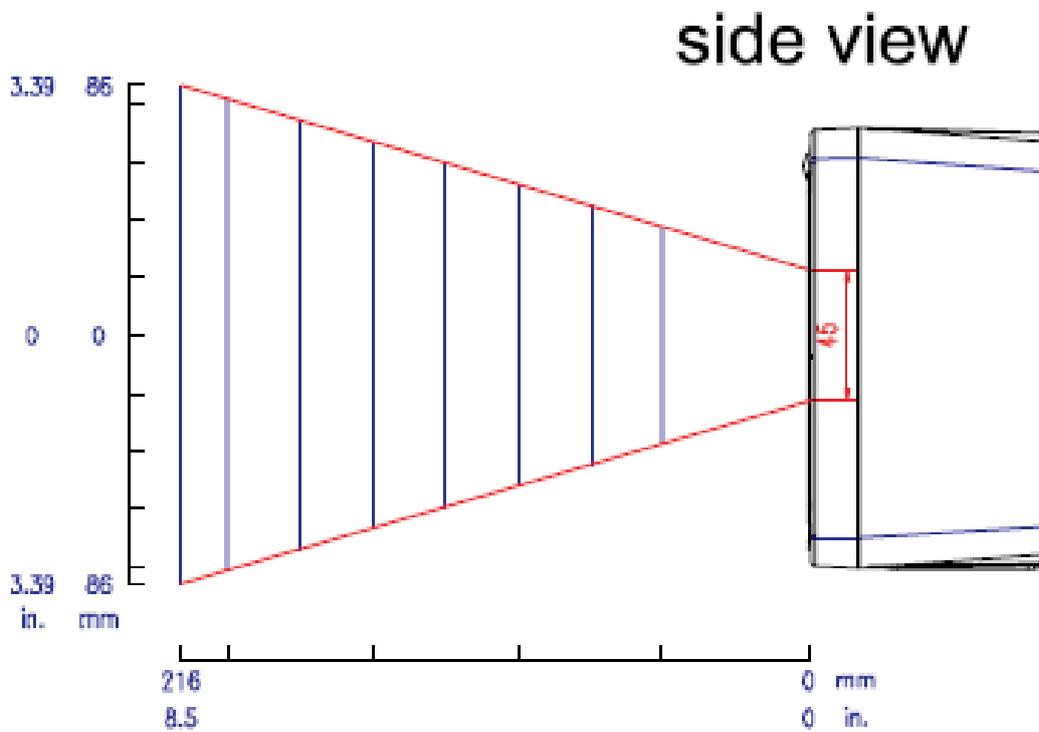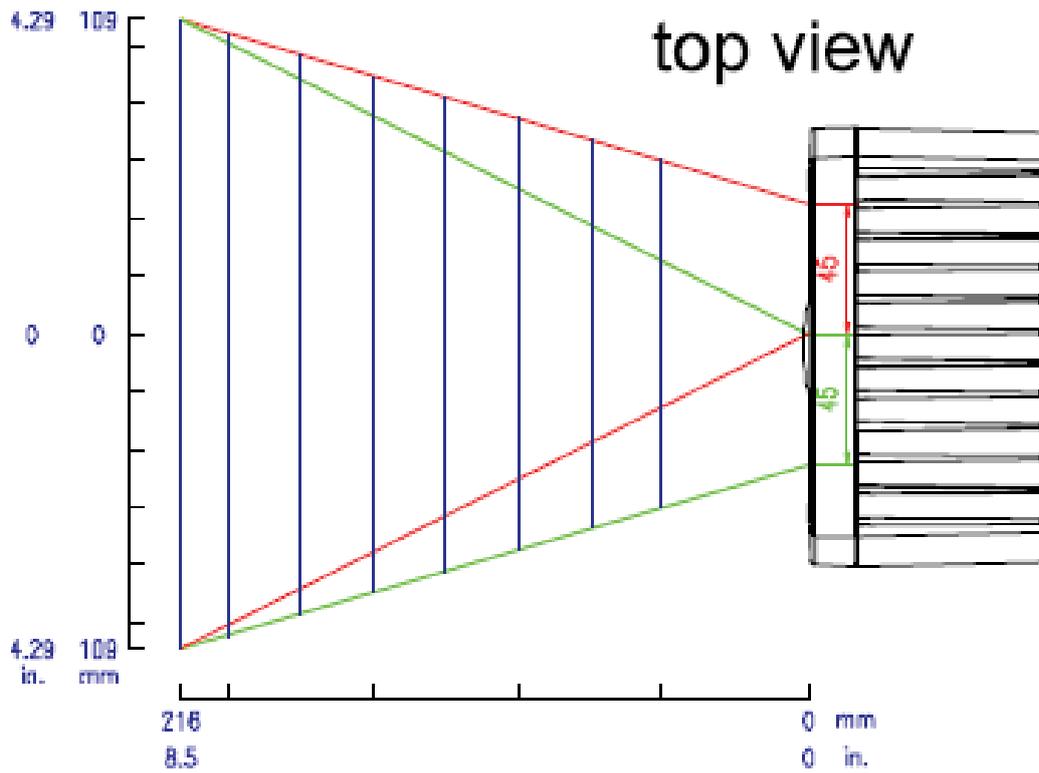

Scan Field

Pin Assignments

Connecting Ports

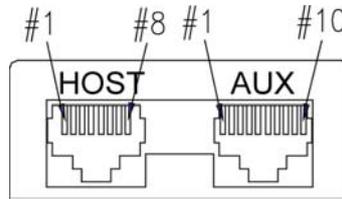


| HOST Port | | |
|-----------|----------------|----------|
| Pin | Connector Type | |
| | Keyboard Wedge | RS-232C |
| 1 | DC + 5 V input | |
| 2 | Keyboard Clock | N.C. |
| 3 | PC Clock | RTS_CMOS |
| 4 | Ground | |
| 5 | N.C. | TXD_CMOS |
| 6 | N.C. | RXD_CMOS |
| 7 | Keyboard Data | N.C. |
| 8 | PC Data | CTS_CMOS |

| AUX Port | |
|----------|----------------------|
| Pin | Function |
| 1 | NC |
| 2 | NC |
| 3 | +5 V out. 150mA max. |
| 4 | RTS_Out |
| 5 | Ground |
| 6 | TXD_Out |
| 7 | RXD_In |
| 8 | NC |
| 9 | CTS_In |
| 10 | NC |

Troubleshooting

| Problem | Diagnostic Tips |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <p>The scanner is on but cannot read barcodes. The LED stays blue.</p> | <p>The scanner window is dirty. Clean the scanner window as described in the Maintenance section.</p> |
| | <p>The presented barcode type is not enabled. Use the Programming Guide to tell the scanner to accept that type of barcode.</p> |
| | <p>The host has disabled the scanner. Check host setup.</p> |
| | <p>The barcode type presented is not supported by the scanner.</p> |
| <p>The scanner is on, but the motor is not running; the facet wheel is not rotating. A barcode cannot be read. The LED is intermittently flashing blue.</p> | <p>The scanner has entered into the sleep mode. Press the push button on the front of the scanner to wake up the scanner, or present an object close to the scan window.</p> |
| <p>The LED remains red and blue.</p> | <p>Possible failure of the scanning safeguard circuit. Disconnect the scanner from its power source immediately and contact your dealer.</p> |
| <p>The scanner does not accept more than two or three barcode labels.</p> | <p>There is no proper handshaking with the POS system. Switch on the POS system and check connection and communication settings.</p> |
| | <p>A stray barcode is sitting somewhere in the scanner field of view. Remove all barcode labels from the scanner's scan volume and try again.</p> |
| | <p>The scanner cannot send the data to the POS system. Make sure that all cables are connected and your POS system is ready to receive data.</p> |

| Problem | Diagnostic Tips |
|-----------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------|
| <p>A barcode is read by the scanner but not accepted by the POS system.</p> | <p>The communication cable is not connected to the correct port of your POS system. Refer to the manual of your POS system to locate the serial port.</p> |
| | <p>The communication settings of the system and scanner do not match. Adjust the settings so they match.</p> |
| | <p>The communication cable does not suit your POS system. Contact your dealer for the correct communication cable.</p> |
| | <p>The software running on the POS system does not support the data format of the barcode label.</p> |

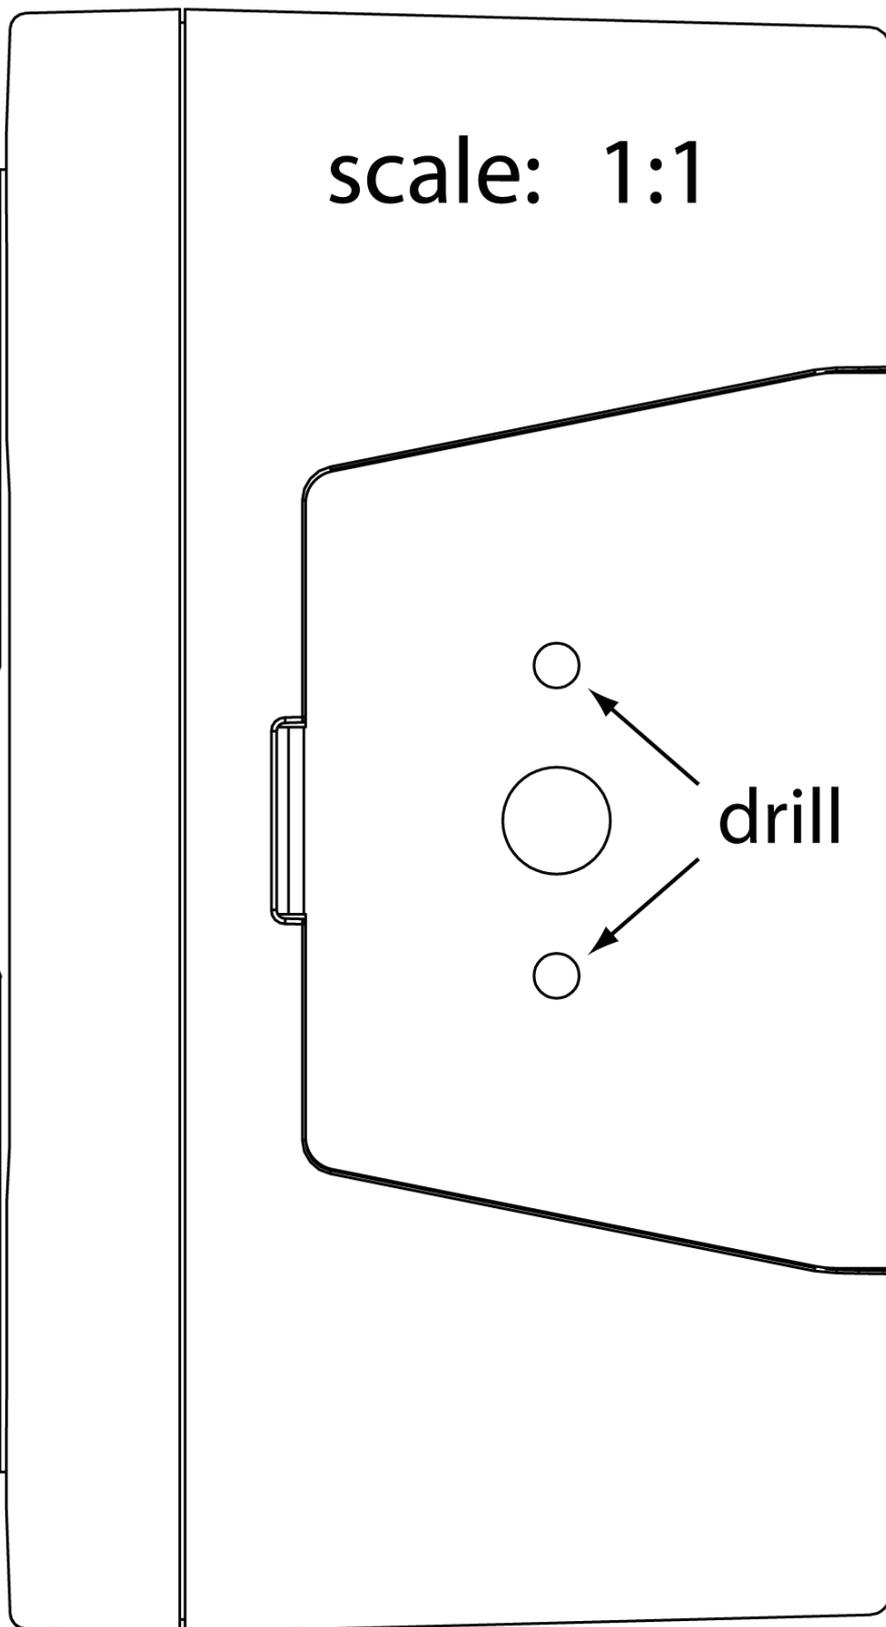

Mounting Plate Boring Template